




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

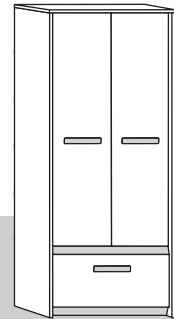



INSTRUKCJA MONTAŻU

BEST 02
 199 80 62

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксессуары / furnitūra :

x 38 KK 8/32	x 7 KT 6,3/50	x 100 GZ 1,4/25	x 4 SG 8/8	x 30 MD	x 16 ZAM	x 2 UB 0	x 12 PA Ø5	x 30 WT 3,5x16	x 6 WT 4x30	x 3 UT 1.839
x 6 ZPW	x 6 PK H-4	x 12 WE 6,3x13	x 1 PO Ø5 E	x 10 BDP	x 1 drażek / slick / stock / hüf / palica / трость / strypas	x 1 WS L450	x 1 PA L450	x 1 kluczyk / key / schlüssel / klíč / ключ / raktas	x 1 klej / glue / kleber / lepidlo / lepidlo / клей / kljaj	

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės:

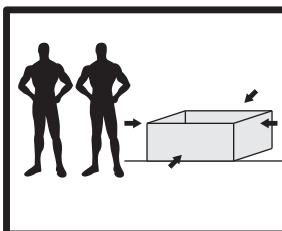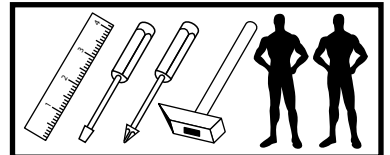

UWAGA ! - mebel należy składać w pozycji poziomej
WARNING! - furniture should be submitted in a horizontal position
WARNUNG! - Möbel sollten in einer horizontalen Position vorzulegen
POZOR! - Nábytek by měl být předložen ve vodorovné poloze
POZOR! - Nábytok by mal byť predložený vo vodorovnej polohe
ВНИМАНИЕ! - Мебель должна быть представлена в горизонтальном положении
DĚMESIO! - Baldą surenkame horizontalioje padėtyje

UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по верхинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	3
4	1
5	1
6	1
7	1
8	1
9	2
10	2
11	2
12	1
13	1
14	2
15	1
16	1
17	1

