
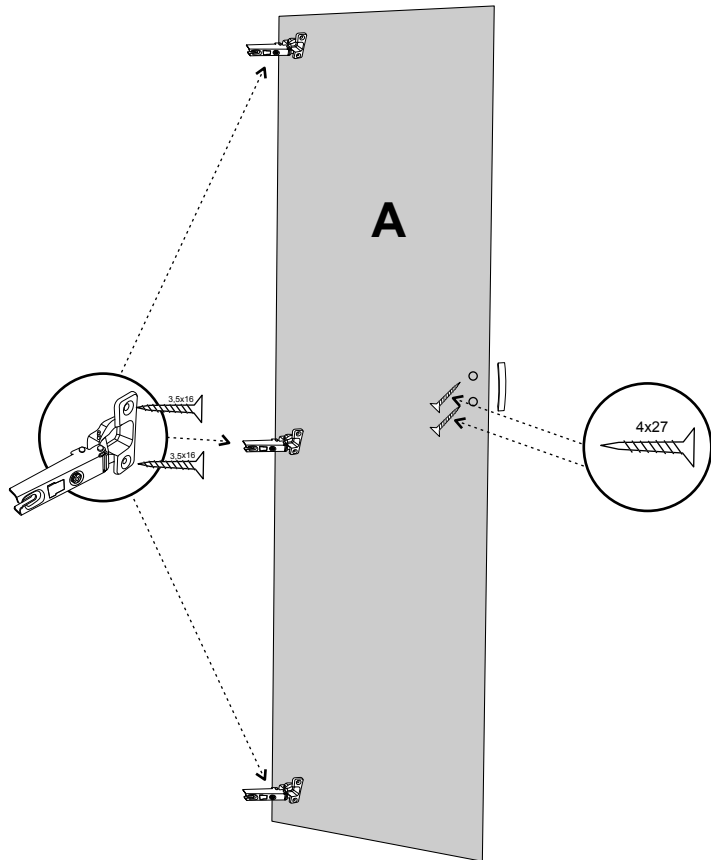


A



www.MLMEBLE.pl

GB assembly instructions / D montageanleitung / CZ montážní návod / SK montážny návod / RUS инструкции по монтажу




















INSTRUKCJA MONTAŻU


RELAX 01


↑198 →80 ↗51

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксесуары :

x 16  KK 8/32	x 9  KT 7/50	x 9  ZAK	x 1  klej / glue / kleber / lepidlo / клей	x 60  GZ 1,4/25	x 1  kluczyk / key / schlüssel / kľuč / ключ	x 16  WT 3,5x16	x 4  WT 4x27
x 6  PK H-0	x 6  ZA 110°	x 3  MD	x 2  UT L96	x 8  PA Ø3	x 1  drażek / stick / stock / हुल / трость	x 2  UB 0	x 12  WE 6,3x13
x 6  SG							

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:

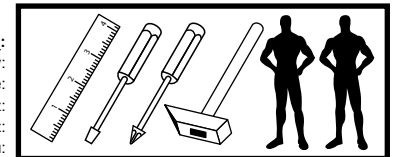

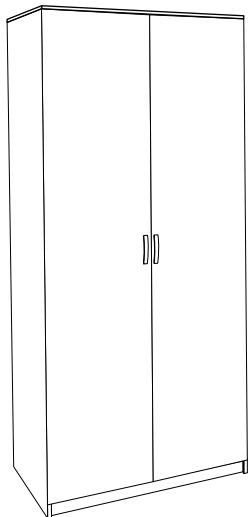

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palic "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.

sequence assembly / reihenfolge montage / sekvence montáž / postupnosť montáže / последовательность ассамбли

Kolejność montażu: I II III IV V VI

