


MONTÁŽNY NÁVOD

Model : FP - 03

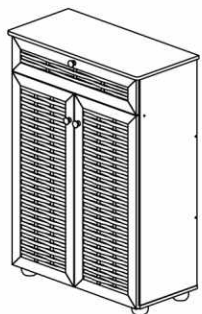


Ukážka inštalácie MINIFIX spoja




KOMONENTY		
Č	POPIS	
1	8x25mm SPOJ. KOLÍK	18Ks
2	15MM Minifix spoj	7 Setov
3	M5x8mm SKRUTKA	4Ks
4	TP 10#x1/2" SKRUTKA	16Ks
5	M3.5x15mm SKRUTKA	4Ks
6	M4x38mm SKRUTKA	15Ks
7	FH M5x38mm SKRUTKA	4Ks
8	POLICOVÝ KOLÍK	16Ks
9	DREVENÁ NOŽIČKA	4Ks
10	Z SVORKA	10Ks
11	3.1 x 20mm SKRUTKA	10Ks
12	ZÁVESY (F012)	4 Sety
13	KOL'ANIČKA (300mm)	1 Set
14	KRYTKA SKRUTKY (9988)	6Ks
15	M4x25mm ÚCHYTKA	3 Sety


KOMONENTY

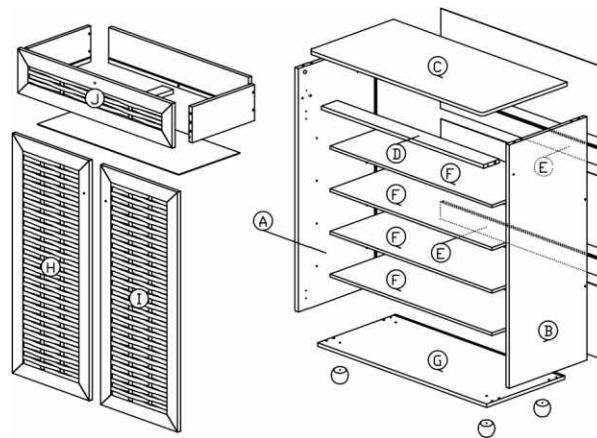


Krok 1

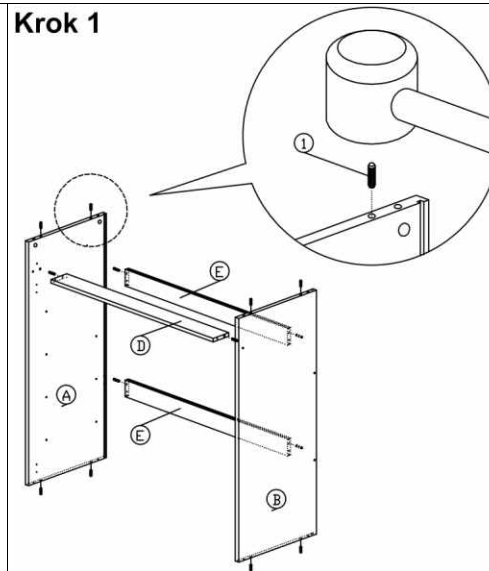


Krok 2

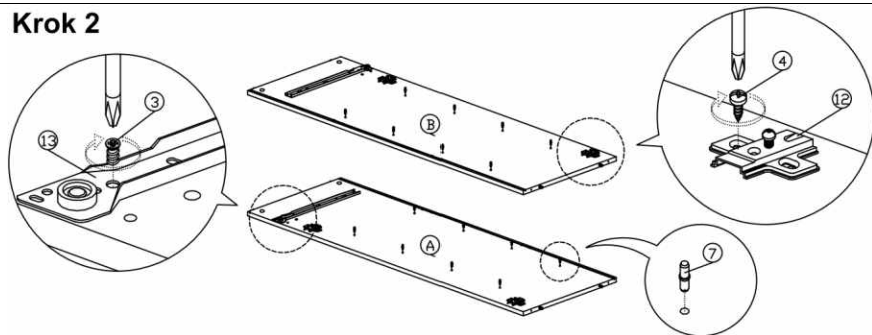


Krok 3

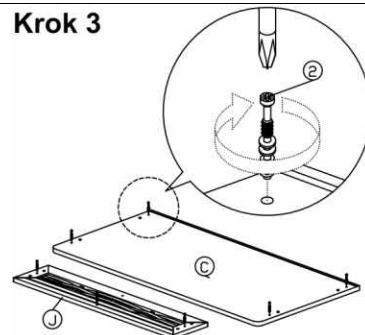


Krok 4

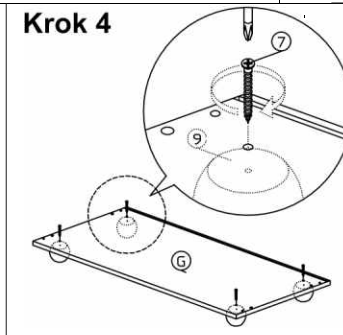


Krok 5

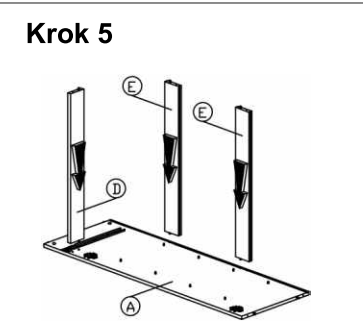


Krok 6

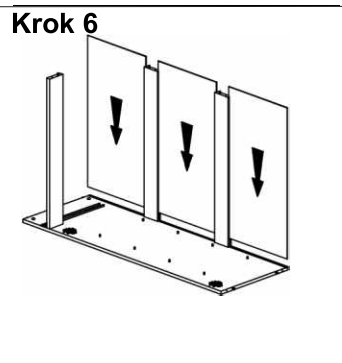


Krok 7

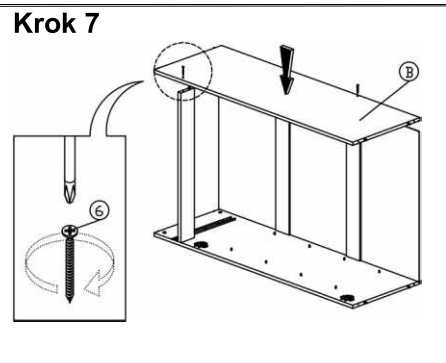


Krok 8

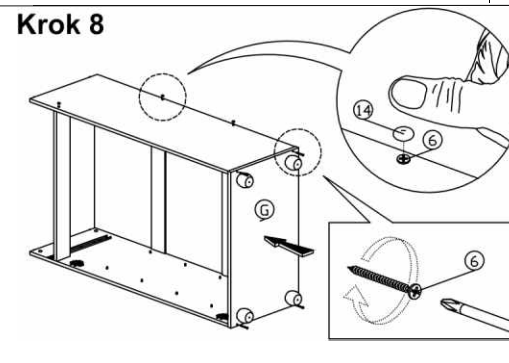


Krok 9

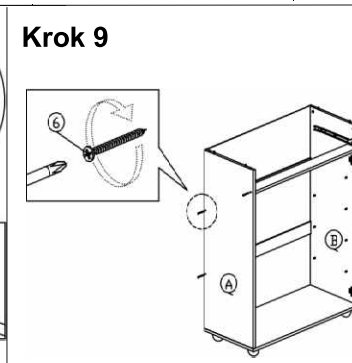


Krok 10

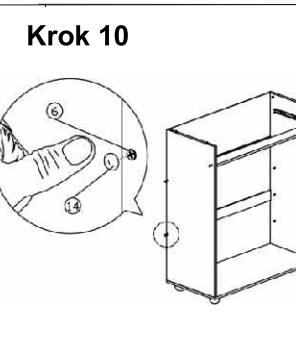


Krok 11

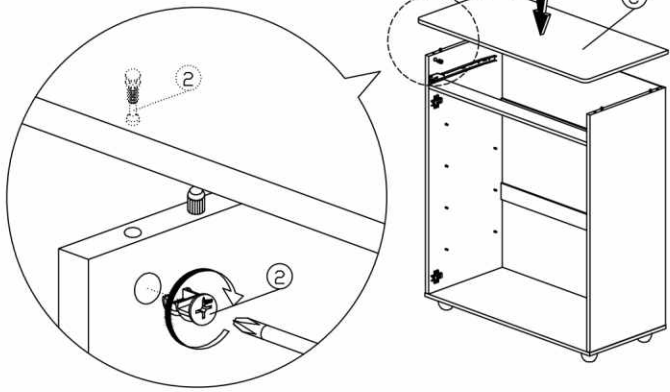


Krok 12

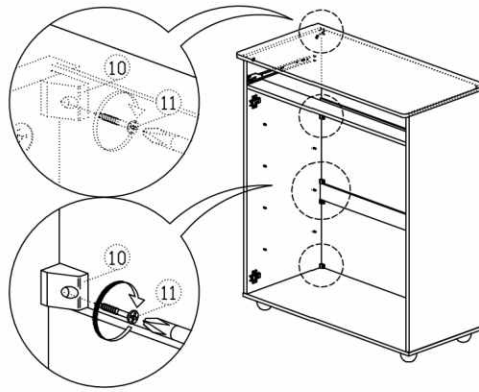


Krok 13

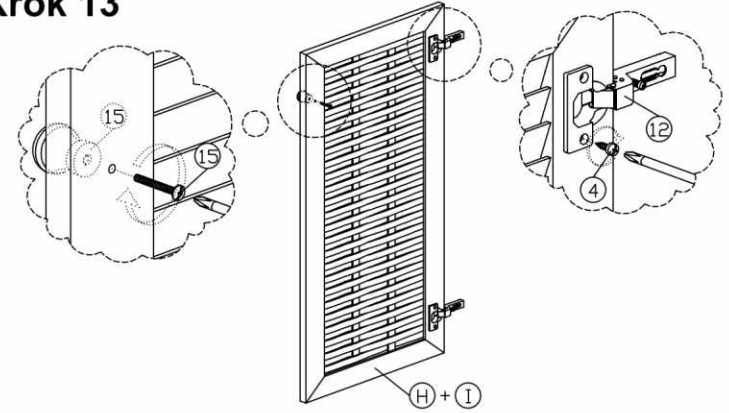


Krok 14

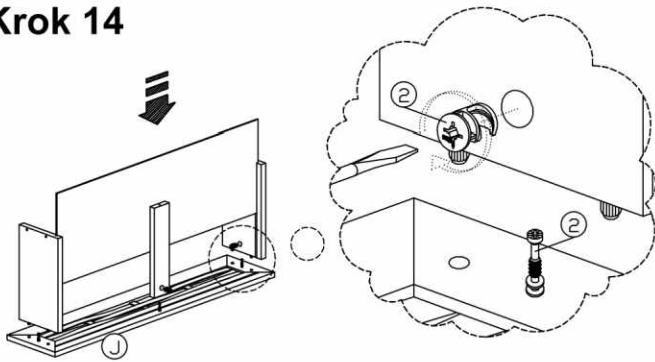


Krok 15

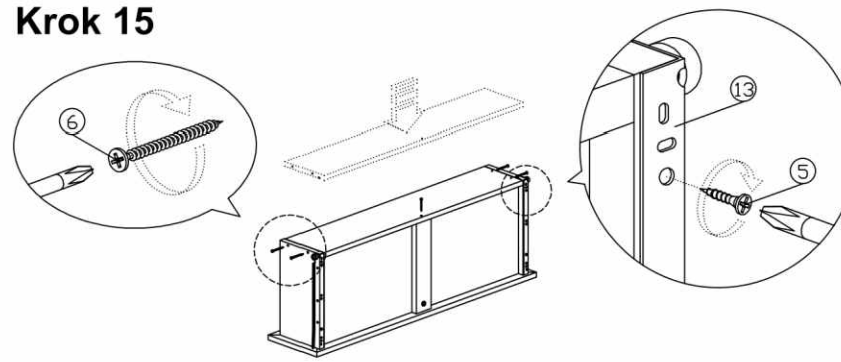

Krok 18

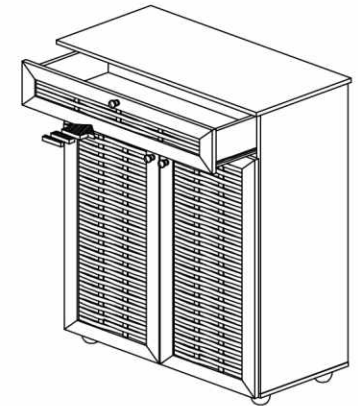

Krok 16

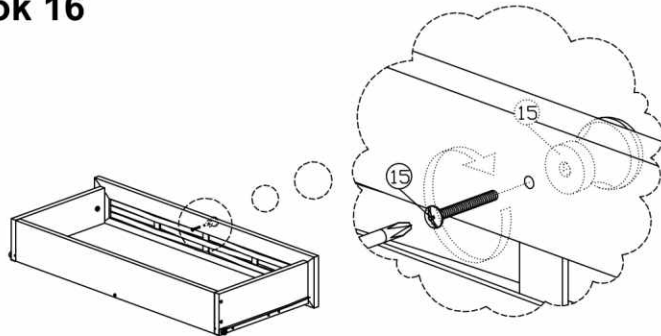

Krok 17

